



P.O> Box 411
Bellville, Texas 77418
979-865-1520

MOONWALK SAFETY AND OPERATING INSTRUCTIONS

FOR YOUR OWN SAFETY, READ ALL INSTRUCTIONS PRIOR TO OPERATING MOONWALK

The operation of this equipment must be supervised at all times by an adult, 18+over. Children of different sizes and age groups should not play in the equipment at the same time.

Age Group	8 and Under	9 to 12 years old	12 and up
Maximum number of kids at one time	8	6	1

There must be a minimum clearance of at least 5 feet on all four sides of the moonwalk.

1. Deflate the moonwalk in high winds (winds exceeding 25 miles / hr. and unplug the blower unit. The equipment can turn over in high winds and this can result in severe injuries to the occupants. Do not resume until adverse weather conditions cease.
2. Have all children remove their shoes, eye glasses, belt buckles and any sharp objects before entering moonwalk.
3. Do not allow flips, somersaults, piling on, wrestling or any other types of aggressive behavior. Do not allow running into walls, columns, or netting.
4. Do not allow leaning, sitting or climbing on the netting, columns or walls of the equipment by persons inside or outside of the moonwalk.
5. Let the children bounce according to sizes. Do not allow larger children to bounce with smaller children. Do not exceed the maximum number of children per age group.
6. Do not allow children to jump close together.
7. Help small children in and out of the moonwalk.
8. Always have the moonwalk supervised by an adult who has reviewed and who understands these safety regulations. Never allow any person over 12 years of age enter the moonwalk.
9. On warm days, be sure to provide children with plenty of water
10. If blower stops or air pressure stops or air pressure is low, remove children and check on problem. Air tubes in rear of bouncer should be tied securely to blower or tied off to prevent air from escaping. Make sure zippers are closed. The electrical cord should be plugged into an outlet and should be the only thing operating on that electrical circuit. Circuit breakers should also be checked. (See next page for detailed blower instructions).
11. Do not allow food, drinks, confetti, silly string, foam, or trash of any kind in the moonwalk.
12. Do not put hoses or water inside the moonwalk.
13. MOONWALKS MUST ALWAYS BE STAKED OR TIED DOWN PROPERLY ON ALL FOUR CORNERS.
14. Children must not be allowed to throw balls in the moonwalk.

15. When not in use, unplug the blower, deflate the moonwalk and disconnect the blower from air supply tube.
16. IN CASE OF RAIN, remove all occupants and deflate inflatable. Unplug blower cord from the wall outlet and take blower to a secure, covered area (or inside). Please take necessary precautions to protect rented equipment from damaging factors

BLOWER SAFETY INSTRUCTIONS

**WARNING: FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS PERSONAL INJURY.
REMEMBER YOUR PERSONAL SAFETY IS YOUR RESPONSIBILITY**

- 1 FOR YOUR SAFETY, READ ALL INSTRUCTIONS PRIOT TO OPERATING THE BLOWER.
- 2 KEEP CHILDREN AWAY. All children should be kept at a safe distance from the blower. Do not allow children to use inflatable as a toy.
- 3 FOLLOW ALL WIRING CODES AND RECOMMENDED ELECTRICAL CONNECTIONS.
- 4 NEVER STAND ON BLOWER. Serious injury could occur if the blower is tipped.
- 5 Always unplug the blower when not in use.
- 6 Always plug in blower and then turn on the switches.
- 7 Always make sure switch is in off position before plugging blower in.
- 8 If the blower gets wet and water is inside the blower, drain the water out of the blower and allow to COMPLETELY dry prior to resuming operation.
- 9 To reduce the risk of electrical shock, do not use on wet surfaces. Do not expose to rain, STORE INDOORS.
- 10 DO NOT HANDLE THE BLOWER OR PLUG WITH WET HANDS.
- 11 Do not pull the blower by the power cord. Never allow the power cord to come in contact with sharp edges, hot surfaces, oil or grease. Do not place anything over the top of the power cord.
- 12 Do not unplug the blower by pulling on the power cord. Always grasp the plug not the cord.
- 13 DO NOT USE A DAMAGED CORD OR PLUG. If the blower is not operating properly or has been damaged, call Bellville Rent-All immediately at 979-865-1520.
- 14 Do not insert fingers or foreign objects into the blower. Keep hair, loose clothing, fingers and all body parts away from the blower.
- 15 Please do not throw the blower.
- 16 Ensure that the power source is sufficient for the blower.
- 17 Do not look into the discharge outlet of the blower. Foreign objects may become dangerous projectiles.
- 18 This blower is to be operated with only the proper safety guards in place to prevent persons or objects from contacting the revolving blower wheel. Any other use creates unsafe conditions. Never operate the unit without safety guards in place.
- 19 Inspect the unit carefully before each use. If the unit appears to have damage contact Bellville Rent-All immediately at 979-865-1520.

ELECTRICAL SAFETY INSTRUCTIONS

- 20 Ensure that the power supply exceeds the requirement of the blower for safe operation.
- 21 The power cord is equipped with a three prong plug that must be inserted into a matching receptacle. Do not remove or cut the ground prong off the plug.
- 22 To reduce the risk of fire or electrical shock, do not use this fan with solid state speed control devices.
- 23 Extension cords must be UL listed for OUTDOORS. Cords up to 50'; 14-3 cords up to 100'; 12-3.
- 24 If electrical cords get damaged, replace immediately.

WARNING: USE OF A THREE PRONG TO TWO PRONG ADAPTERS IS NOT RECOMMENDED. IMPROPER CONNECTION MAY CREATE THE RISK OF ELECTRICUTION. USE OF SUCH ADAPTERS IS PROHIBITED IN CANADA. DO NOT DEPEND ON ANY SWITCH OR OTHER CONTROLLING DEVICE AS THE ONLY MEANS OF DISCONNECTING POWER WHEN INSTALLING BLOWER. ALWAYS UNPLUG THE POWER CORD. FAILURE TO DO SO MAY RESULT IN ELECTRICAL SHOCK. THIS COULD BE FATAL.

TROUBLESHOOTING CHART

SYMPTOM	POSSIBLE CAUSES	CORRECTIVE ACTION
Blower does not run...	Bad Power Supply. Broken or faulty power cord. Defective Motor or Switch.	Check cord and power outlet. Check GFI (if using it). Check if circuit breaker has tripped.
Fan runs slow...	Too Small of a Power Cord.	Replace with 10-3 or 12-3 Power Cord.
Poor Air Flow...	Air inlet is restricted.	Clean air inlet.
Fan blows Circuit Breaker..	Too long of extension cord. Blower requires a dedicated 15 Amp circuit for 1 HP, 20 amp circuit for 1.5 HP.	Max length of cord should be 50'. Find cleaner circuit for a different. Higher rated breaker.
Scraping noise in blower...	Blower wheel is out of balance.	Call Bellville Rent – All for repair.

By signing below, the customer agrees that he or she has received a copy of the safety instructions and agrees to follow all safety guidelines stated and assumes all liability and risks.

X

Customer Signature

X

Date

In case of emergency, please call our office at 979-865-1520 or 979-865-1521
(and follow instructions on recording)